



E36/E46/E39 installation guideline:


1st step: remove all the bars from trunk of the car or the back of the old bumper.

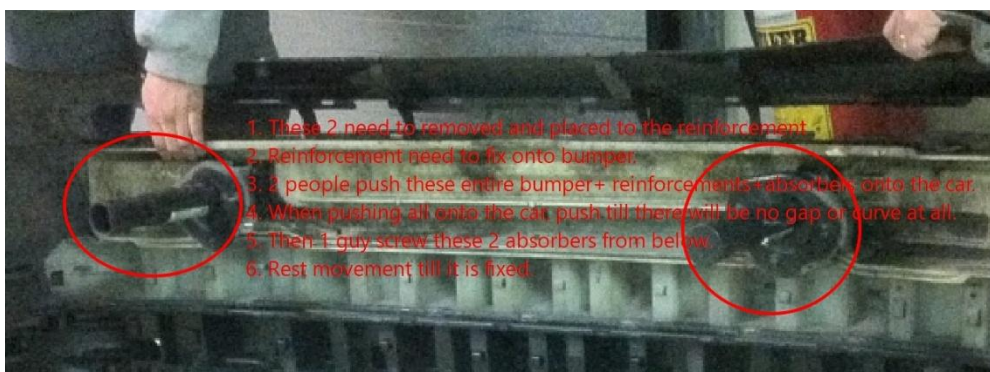

2nd step: also remove the reinforcement from your old bumper.

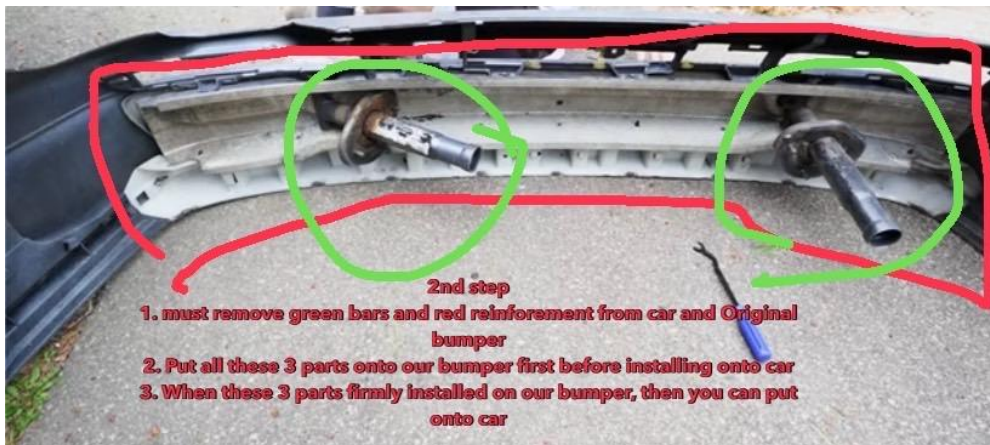

3rd step: put all 3 parts (2 bars + reinforcement) onto the our M-tech bumper.

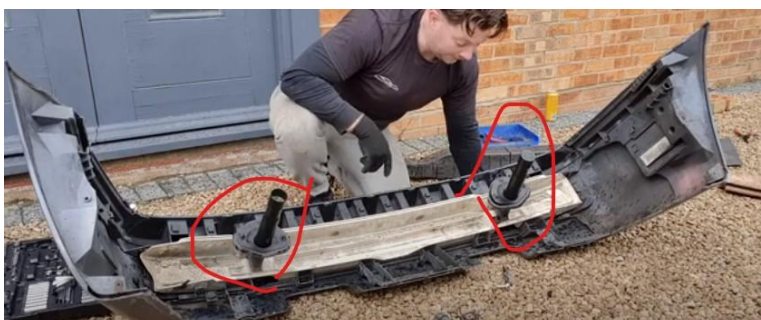

4th step: must put our inner bracket properly to the side of the car. (P3)



5th step: when 3 parts firmly intalled on our bumper, then you can put onto the car.



6th step: Now put the bars with the bumper as deep as possible, adjust or pull up the bar as high as possible to avoid any gap between trunk and upper side of the bumper, then screw firmly.

